

Pico G2 4K S Quickstart Guide




VR Expert
Demkaweg 11
3555HW, Utrecht

Info@vr-expert.nl
030 7116158



Hardware

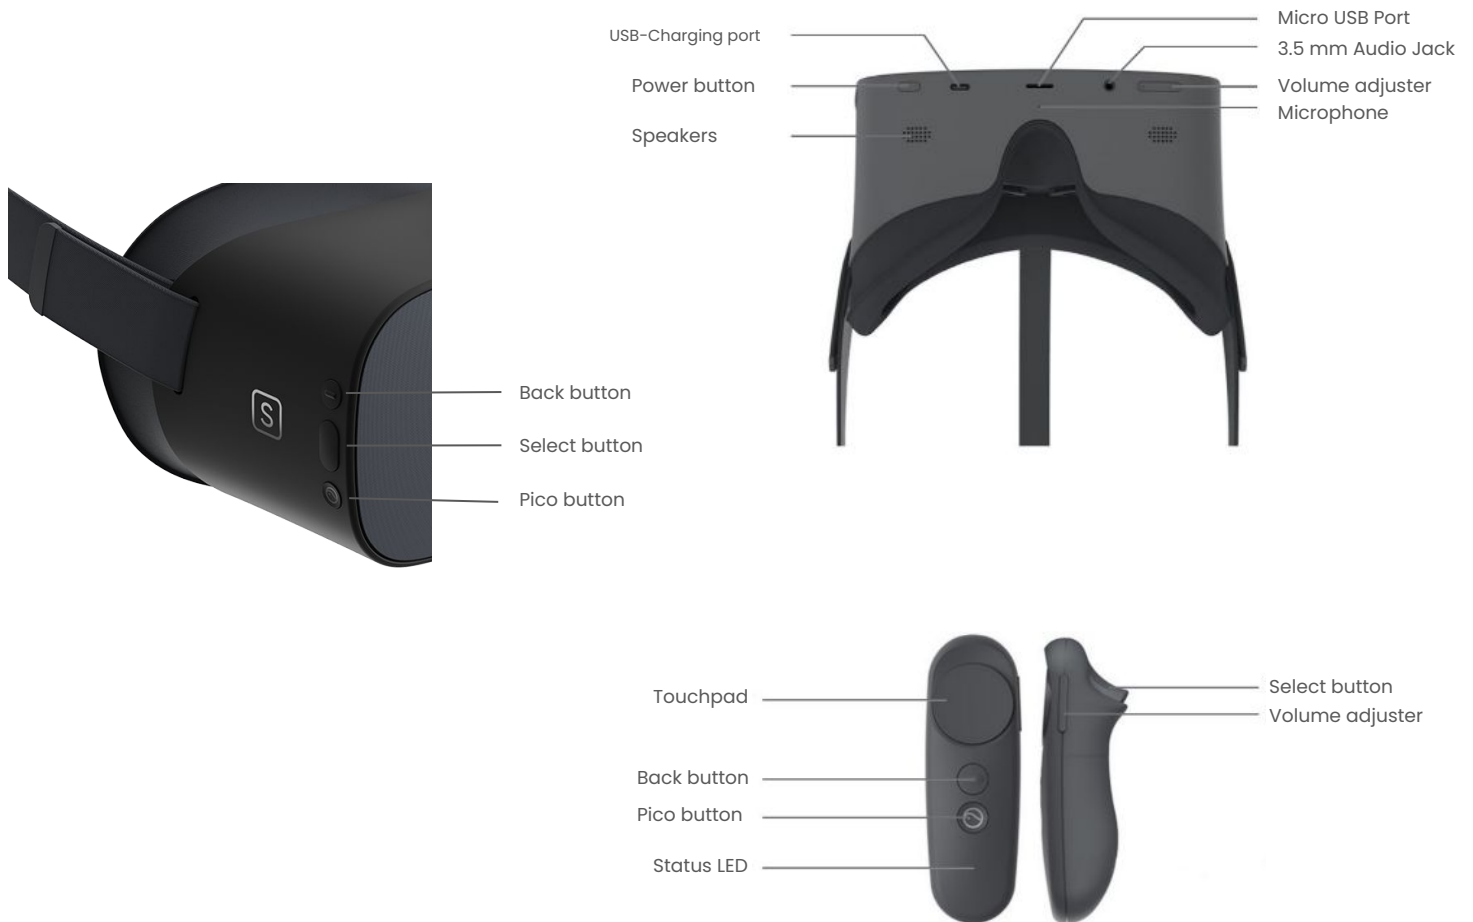

In the box

- 1x Pico G2 4K S
- 1x Pico motion controller
- 1x Power adapter (USB-C)
+ USB C cable
- 2x AAA battery

Before you start

- Do not allow the lenses to come in contact with periods of **direct sunlight**. This will permanently damage the screen and does not fall under warranty.
- The Pico controller is not essential to use the Pico G2 4K S .

How to install

1. Put on the Pico G2 4K S and press the "Power-Button" for approximately 3 seconds.
2. The set up guide will start automatically.
 - a. Connect the controller if you want. - Otherwise click on skip.
 - b. Choose a language. - Then click "Ok".
 - c. The buttons will be explained in the headset. - Click "Ok"
 - d. The privacy agreement will appear in the headset. - Accept them and click "next".
 - e. The radius will be explained - Click "continue".
 - f. Warning window will appear - Read it, then click "I know".
3. You are now at the main menu of the Pico G2 4K S. - Enjoy the ride!

How to connect Wi-Fi

1. Click on the Wi-Fi-Symbol in the task bar.
2. Click on "Wlan" to turn it on or off.
3. The headset will automatically search for any Wi-Fi in the area.
4. Choose your Wi-Fi and enter the password. - when done, click on the "enter-key".
5. Click on connect - the headset will connect to the chosen Wi-Fi.

How to download applications from store

1. Click on "Store" in the Pico main menu.
2. Create a Pico account in the device or register your account here https://us-passport.picovr.com/register/regpre?lang=en_US
3. Search for the desired application in the store.
4. Click on download or buy.
5. The application will then appear in your library.

VR Expert Tips

Pico button

The Pico button is located on the controller and on the headset. The button has the Pico symbol on it.

- Pressing the Pico button for a few seconds will bring you to the main menu at any time. The running application will be minimized, not closed.
- Double clicking the Pico button will open the task manager. You will be able to 'switch' or close the active applications here.
- To 'center' the view, look straight ahead and hold the Pico button (either on the headset or on the controller) for approximately 2 Sec.

VR Expert Tips

Back button

- With the back button, you will be able to get to the previous page, but the current application won't close when you switch.

Developer Mode

1. From the home menu in the taskbar. Go to settings in the settings The Symbol is next to the battery at top of the main menu..
2. Go to 'About'. It's the most right option. Click on it.
3. Click eight times on PUI Version. You are a developer now!
4. Navigate back to settings. On the right side of 'about' a { } - Symbol with 'advanced settings' will appear. Click on it.
5. Now a 2D android settings menu will appear. Scroll down (click & drag) and select "system", then select "{ } developer options".
6. Turn on USB debugging.

How to install my own application

1. Turn on the developer mode. (see explanation above).
2. Connect the computer with the Pico G2 4K S through the USB cable.
3. Make sure USB debugging is on (see section "developer mode")
4. Navigate to Pico G2 4K S headset through windows file explorer.
5. Copy the APK to the Internal storage.
6. Go to the File manager in the headset.
7. At the top of the screen it will say 'videos, images , APKs'. Select APKs
8. Select your APK to install it. Once ready you can start/open your application.
9. After installation, the application should be accessible on the right side of the home menu.

Other Links:

- Starting development for the Pico? Please find the link below for the SDK.
<https://developer.pico-interactive.com/sdk>
- Native Pico 'Kiosk mode' information.
<http://static.appstore.picovr.com/docs/KioskMode/index.html>